


LaCie Ethernet Disk RAID


Professional NAS System

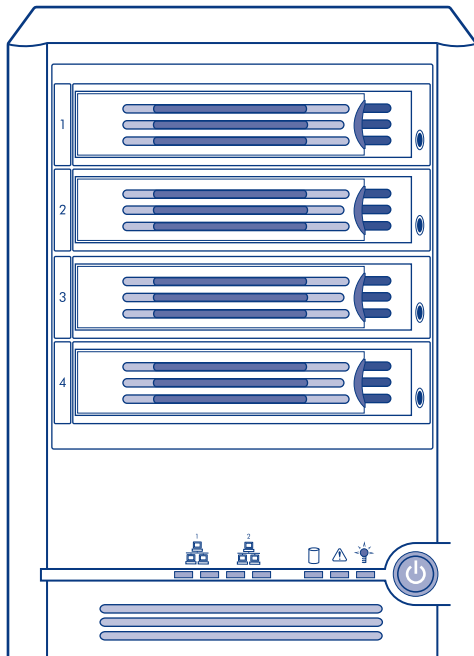

Quick Install Guide


PACKAGE CONTENTS

- LaCie Ethernet Disk RAID tower with 4 removable drive trays and hard drives
- Ethernet Cable
- Power Supply
- Utilities CD-ROM
- Quick Install Guide

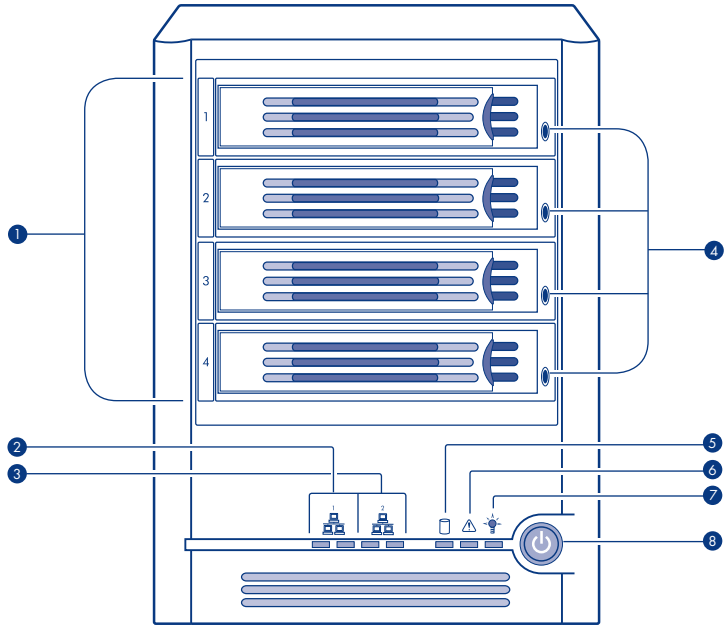

Front/Top View

- | | |
|------------------------------|---------------------------|
| 1. Drive Carriers 1-4 | 5. Global Disk Status LED |
| 2. Network Connection 1 LEDs | 6. System Status LED |
| 3. Network Connection 2 LEDs | 7. Power LED |
| 4. Hard Disk Activity LEDs | 8. Power Button |

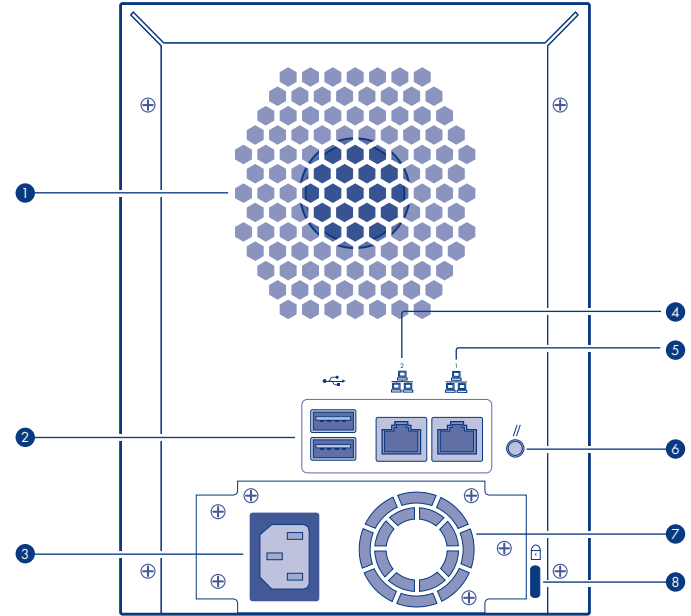


Rear View


- | | |
|-----------------------|-----------------------|
| 1. System Fan | 5. Gigabit LAN Port 1 |
| 2. USB 2.0 Ports | 6. Reset Button |
| 3. Power Connector | 7. Power Supply Fan |
| 4. Gigabit LAN Port 2 | 8. Security Slot |

Setup Steps

1. Connect the Ethernet cable to the Ethernet port 1 on the system tower and to your router. (Fig. 1)

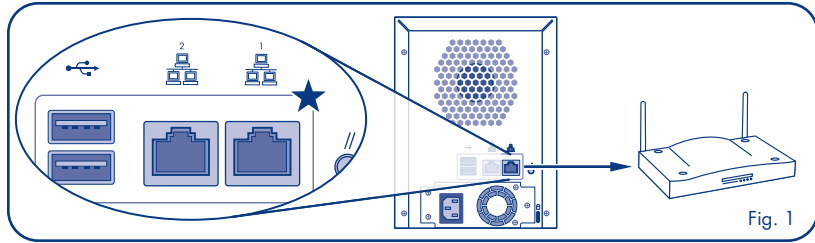

2. Connect the power supply.
3. Turn the storage system on by pressing the power button on the front of the tower. (Fig. 2)

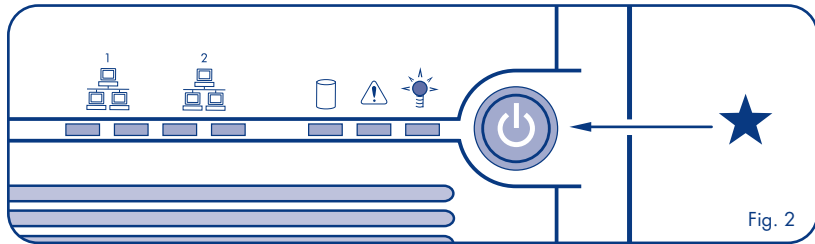

4. Install the Storage System Console from the Utilities CD-ROM.
 - a) Insert the CD-ROM.
 - b) Click **Software**.
 - c) Click **LaCie Storage System Console**.
5. Start the Console by selecting **Start > Programs > Storage System Console**.
6. Click the **Log On Storage System Manager** button.
7. Enter "admin" for the user name & "storage" for the password. Click **Log In**.
8. Start configuring the LaCie Ethernet Disk RAID. For more information, refer to the User Manual.

CONTACT US

LaCie USA

22985 NW Evergreen Pkwy
Hillsboro, OR 97124
sales@lacie.com

LaCie France

17, rue Ampère
91349 Massy Cedex
sales.fr@lacie.com

LaCie Asia (HK)

25/F Winsan Tower
98 Thomson Road
Wanchai, Hong-Kong
sales.asia@lacie.com

LaCie Asia (Singapore)

Centennial Tower, Level 21
3 Temasek Avenue
Singapore 039190
sales.asia@lacie.com

LaCie Australia

458 Gardeners Rd.
Alexandria, NSW 2015
sales.au@lacie.com

LaCie Belgium

Vorstlaan 165/ Bld
du Souverain 165
1160 Brussels
sales.benelux@lacie.com

LaCie Canada

235 Dufferin St.
Toronto, Ontario M6K 1Z5
sales.ca@lacie.com

LaCie Germany

Am Kesselhaus 5
D-79576 Weil Am Rhein
sales.de@lacie.com

LaCie Italy

Centro Direzionale
Edificio B4
Via dei Missaglia 97
20142 Milano
sales.it@lacie.com

LaCie Japan K.K.

Uruma Kowa Bldg. 6F
8-11-37 Akasaka, Minato-ku
Tokyo 107-0052
sales.jp@lacie.com

LaCie Netherlands

Postbus 134
3480 DC Harmelen
sales.benelux@lacie.com

LaCie Nordic

(Sweden, Denmark, Norway,
Finland)
Sveavägen 90, 5tv
113 59 Stockholm, Sweden
sales.nordic@lacie.com

LaCie Spain

C/ Núñez Morgado, 3, 5º pl.
28036 Madrid
sales.es@lacie.com

LaCie Switzerland

Dauidsbodenstrasse 15 A
4004 Basel
sales.ch@lacie.com

LaCie United Kingdom

46 Gillingham Street
London, England SW1V 1HU

LaCie Ireland

sales.uk@lacie.com

LaCie Worldwide Export

17, rue Ampère
91349 Massy Cedex
France
sales.intl@lacie.com
support.intl@lacie.com

Visit www.lacie.com for
more information on LaCie
products.

French Headquarters:

LaCie Group
33 Bld du Général Martial Valin
75015 Paris France

